

**Thank you for your purchase!** At MSW® we believe having essential accessories makes a good bike ride great. Cricket is MSW's handy USB rechargeable light. Keep them on your bike mounted to the handlebar and seatpost, or easily remove them for safe storage in a commuter backpack or bag. Be seen on your rides!

**▲ WARNING:** Cycling can be dangerous. Bicycle products should be installed and serviced by a professional mechanic. Never modify your bicycle or accessories. Read and follow all product instructions and warnings including information on the manufacturer's website. Inspect your bicycle before every ride. Always wear a helmet.

For more information, please visit [www.mswbike.com/safety](http://www.mswbike.com/safety)

 
### COMPATIBILITY & INTENDED USE

Cricket is intended to add visibility to riders in low light and nighttime riding conditions. Compatible with most diameters of handlebars, seatposts, and 19–48mm frame tubes.

**▲ WARNING:** Ensure that the Cricket light is placed an adequate distance away from any rotating components of the bicycle or bicycle wheels and is not obstructed by any components, accessories, or cargo.


### HEADLIGHT INSTALLATION

1. The Cricket ships charged and ready for use, simply affix one end of the rubber strap around one of the hooks of the Cricket light's body.
2. Place the light in the desired position against the handlebar or frame tube and affix the other end of the rubber strap around the other open hook of the light's body until it is firmly held in place.

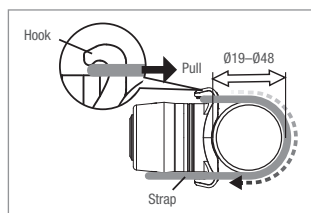


### TAILLIGHT INSTALLATION

 1. Affix one end of the rubber strap around one of the hooks of the Cricket light's body.
2. Place the light in the desired position against the seatpost or frame tube and affix the other end of the rubber strap around the other open hook of the light's body until it is firmly held in place.

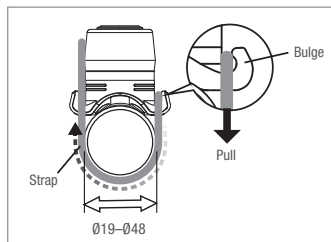

### TO SWITCH MODES

 Press the lens of the light twice to turn the light on, and once after the light is on to toggle between modes.

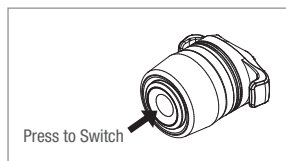


### BATTERY CAPACITY INDICATOR

Press and hold the lens of the light for a second or more to see the remaining battery capacity. The indicator will show the remaining battery life in one of four modes:




### LOW BATTERY INDICATOR

 When the battery capacity is less than 25%, the light will intermittently blink twice every ten seconds.

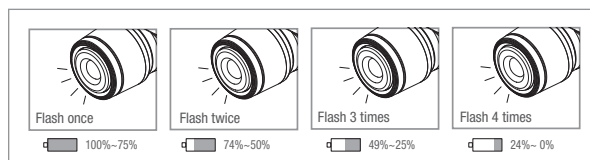


### CHARGING

 1. Twist and unscrew the Cricket's metal body from the nylon light bracket

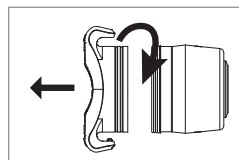

to access the USB port.

 2. Plug the appropriate ports into the back of the light and into a USB charger

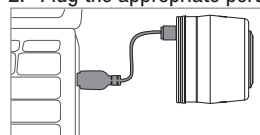

or laptop with the charging cable provided.

### ONGOING MAINTENANCE

To get the best performance from your MSW Cricket light, keep it clean of debris, do not submerge the light, and replace worn or damaged rubber mounting strap and rubber backer pad.

## LIMITED 2-YEAR WARRANTY

MSW warrants this new MSW product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of MSW, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the MSW product and is not transferable.

In no event shall MSW be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended use with or compatible with MSW products.

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## WARRANTY PROCESS

If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit [www.mswbike.com/safety/warranty](http://www.mswbike.com/safety/warranty).