

**Thank you for your purchase!** At MSW® we believe having essential accessories makes a good bike ride great. MSW's handy lights add visibility and an element of safety to you and your bike wherever you may ride.

**▲ WARNING:** CYCLING CAN BE DANGEROUS. BICYCLE PRODUCTS SHOULD BE INSTALLED AND SERVICED BY A PROFESSIONAL MECHANIC. NEVER MODIFY YOUR BICYCLE OR ACCESSORIES. READ AND FOLLOW ALL PRODUCT INSTRUCTIONS AND WARNINGS INCLUDING INFORMATION ON THE MANUFACTURER'S WEBSITE. INSPECT YOUR BICYCLE BEFORE EVERY RIDE. ALWAYS WEAR A HELMET.

CONSULT YOUR LOCAL LAW ENFORCEMENT FOR ORDINANCES AND LAWS THAT PERTAIN TO RIDING A BICYCLE AT NIGHT. WE STRONGLY RECOMMEND USING A FRONT AND REAR LIGHT AS WELL AS WHEEL AND PEDAL REFLECTORS WHEN RIDING AT NIGHT. THE BEST WAY TO STAY SAFE IS TO RIDE DEFENSIVELY.

**▲ WARNING:** Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as two hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep the batteries away from children. The risk of a child getting a battery is highest when changing batteries, please use caution when doing so. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

For more information, please visit [www.mswbike.com/safety](http://www.mswbike.com/safety)

## COMPATIBILITY AND INTENDED USE

MSW Cricket Safety Lights are compatible with 20–40 mm handlebar diameters. They are intended to aid visibility in nighttime riding conditions.

## INSTALLATION

Refer to diagrams for additional information.

Place the front white light on the handlebar. Pull the long strap around the back and place the hook at the end of the short strap through the appropriate hole in the long strap to secure it (fig. 1).

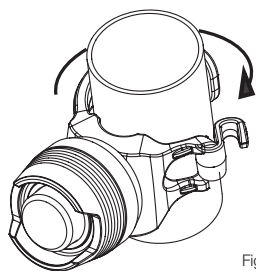


Figure 1

Place the rear red light against the back of the seatpost. Align the rubber strap so that the light is at a 90° angle from the ground (fig. 2).

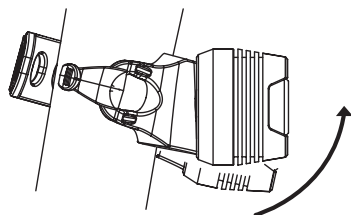


Figure 2

Pull the long strap around the back and place the hook at the end of the short strap through the appropriate hole in the long strap to secure it (fig. 3).

**NOTE:** Make sure the lights are not obstructed by racks, bags or cargo.

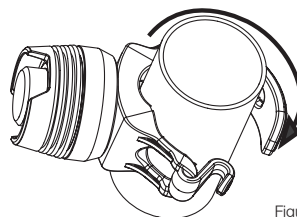


Figure 3

## TO INSTALL BATTERIES

Unscrew the front of the light from the base in a counter clockwise direction to access the battery port (figs. 4 and 5). Two CR2032 batteries are required. The light will run for 50 hours in “steady” mode, and 150 hours in “flash mode”.

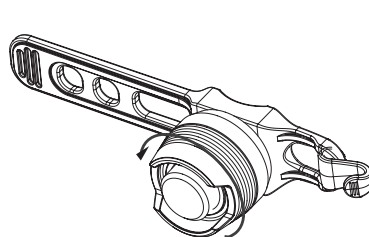


Figure 4

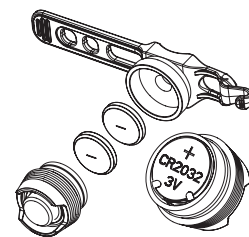


Figure 5

## OPERATING THE LIGHT

Press down on the light's lens to turn on, switch modes, and turn off.

## ONGOING MAINTENANCE

Do not submerge the lights in water.

A coin-cell, lithium-ion battery is used in this device. If these guidelines are not followed, batteries may experience a shortened lifespan or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle. To prevent the possibility of damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.

Do not disassemble, modify, remanufacture, puncture, or damage the device or batteries.

Do not immerse or expose the device or batteries to water or other liquids, fire, explosion, or other hazard.

Do not use a sharp object to remove the batteries.

**KEEP BATTERIES AWAY FROM CHILDREN.**

**NEVER PUT BATTERIES IN MOUTH.** Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within two hours of ingestion. Seek medical attention immediately.

Replaceable coin-cell batteries may contain perchlorate material. Special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

Only replace batteries with correct replacement batteries. Using other batteries presents a risk of fire or explosion.

Do not operate the device outside of the temperature ranges specified in these instructions.

Contact your local waste disposal department to dispose of batteries in accordance with applicable local laws and regulations.

## LIMITED 1-YEAR WARRANTY

MSW warrants this new MSW product against defects in materials and workmanship for one (1) year from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of MSW, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the MSW product and is not transferable.

In no event shall MSW be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended use with or compatible with MSW products.

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## WARRANTY PROCESS

If you and your shop think your MSW product is worthy of a warranty inspection, please return the product to the original place of purchase, accompanied by a sales receipt.

For complete warranty information, visit [www.mswbike.com/safety/warranty](http://www.mswbike.com/safety/warranty).